


SPACE

Shower screen

ASSEMBLY INSTRUCTIONS SPACE SHOWER SCREEN

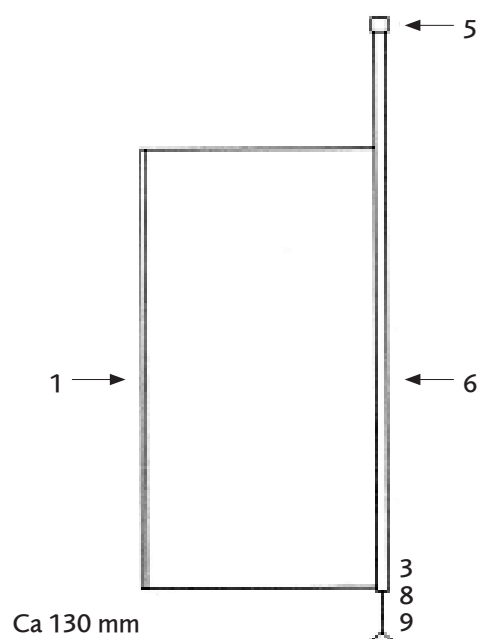

MATERIAL SPECIFICATION

- 1 pc compact laminate 1860 x 900
- 1 pc ceiling bracket
- 1 pc floor pedestal
- 1 pc allen key
- 1 pc wall moulding 1860 mm
- 1 pc 1-way moulding 3000 mm

DO THIS

1. Install the wall profile. Be careful with the horizontal and vertical line.
2. Mount the screen in the wall profile. Make sure that the screen is fully inserted into the profile and that the bottom edge is evenly mounted against the profile.
3. Fit the floor pedestal into the threaded end of the 1-way moulding.
4. Cut the 1-way moulding in the height joint. Note that the top edge of the foot should be level with the lower edge of the screen.
5. Install the ceiling bracket.
6. Press the 1-way moulding profile on the screen while pushing up the 1-way moulding profile in the ceiling bracket.
7. Now tighten the allen screws.
8. Tension the system by adjusting the floor pedestal.
9. Drill through the pre-drilled holes in the floor pedestal, down into the floor. Turn down the plastic plug and nail.

Our products Space and Basic are listed in the database for buildingproducts that can be used in Nordic Swan Ecolabelled buildings.

