

RecoVibe9 Wall Absorber

Installation Instructions
2026 06 08

Wallsystems
by Glimakra of Sweden



CONTENTS

Tools & Accessories 3

Installation Method Using WallRibbon Mounting Adhesive ____ 4

RecoVibe9 Wall Absorber

Installation Instructions

2026 06 08

 **Wallsystems**
by Glimakra of Sweden

TOOLS YOU'LL NEED



Assembly Adhesive



Spirit Level



Measuring Tape




Ruler

RecoVibe9 Wall Absorber

Installation Instructions
2026 06 08

Wallsystems
by Glimakra of Sweden

MEASURE THE WIDTH AND HEIGHT OF THE WALL

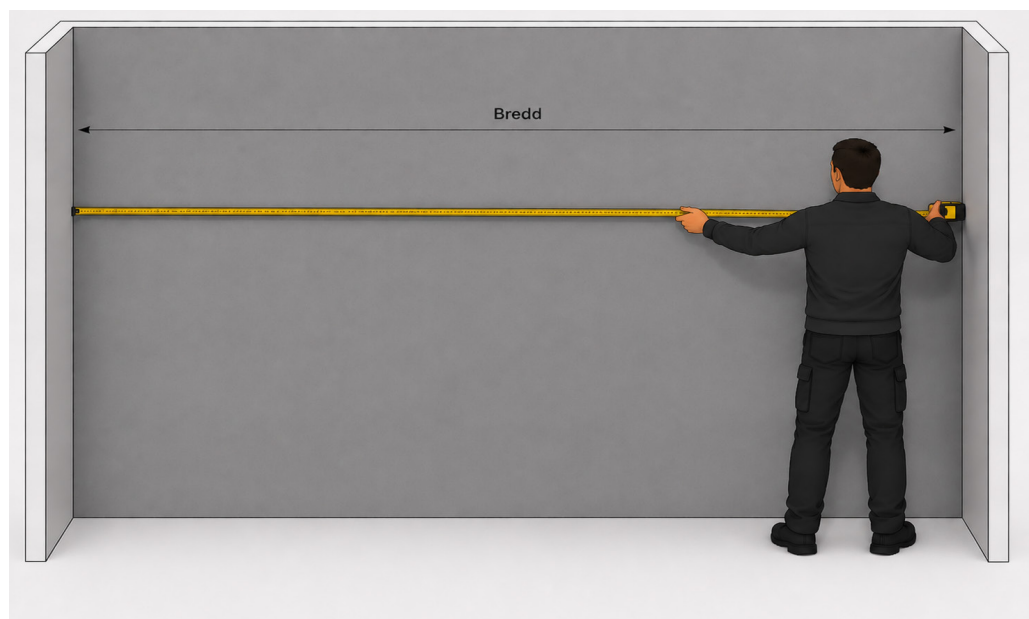

1


Use the selected measuring tool to check the width and height of the wall. This will give you an idea of where to start installing the wall absorber.

RecoVibe9 Wall Absorber

Installation Instructions
2026 06 08

Wallsystems
by Glimakra of Sweden

MONTERING MED MONTERINGSLIM

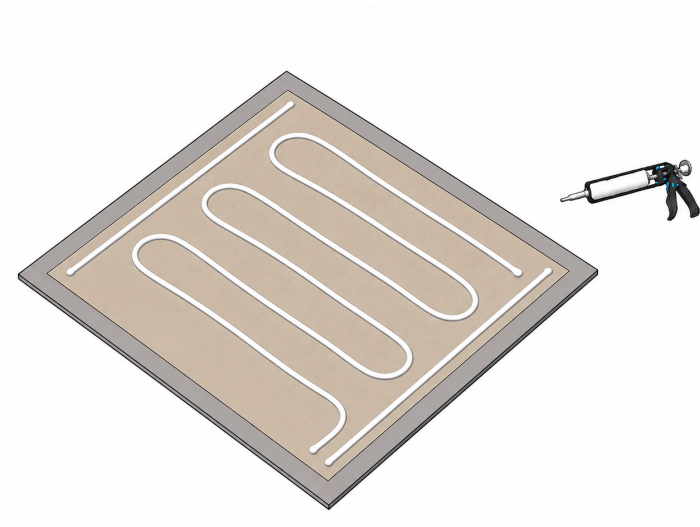

2

Glue the panels using our mounting adhesive, following the pattern shown in the picture. One tube is enough for about eight wall absorbers.



3

Carefully turn the panel over so that it stands upright with the adhesive facing the wall. Then place the panel where it is to be installed, taking care not to bend the panels or disturb the adhesive in any way.



Use your hands to press the panel firmly against the wall; this ensures that the panel makes proper contact with the wall and allows the adhesive to spread out.

RecoVibe9 Wall Absorber

Installation Instructions
2026 06 08

Wallsystems
by Glimakra of Sweden

REPEAT THE PROCESS

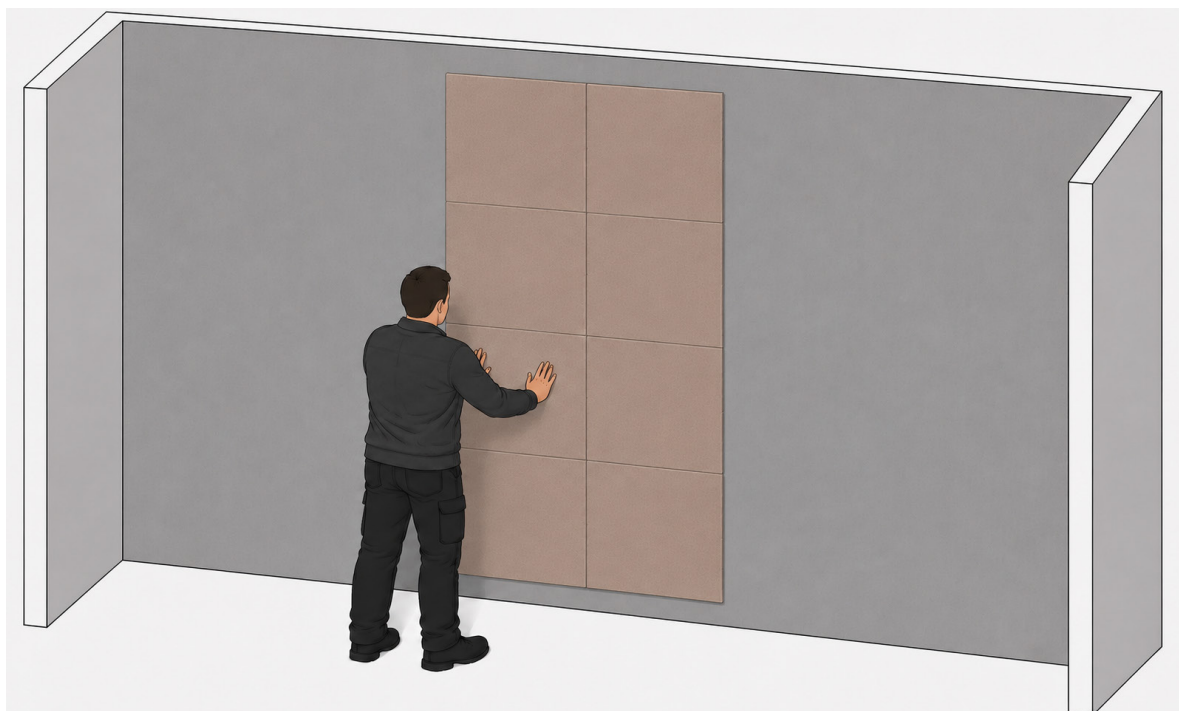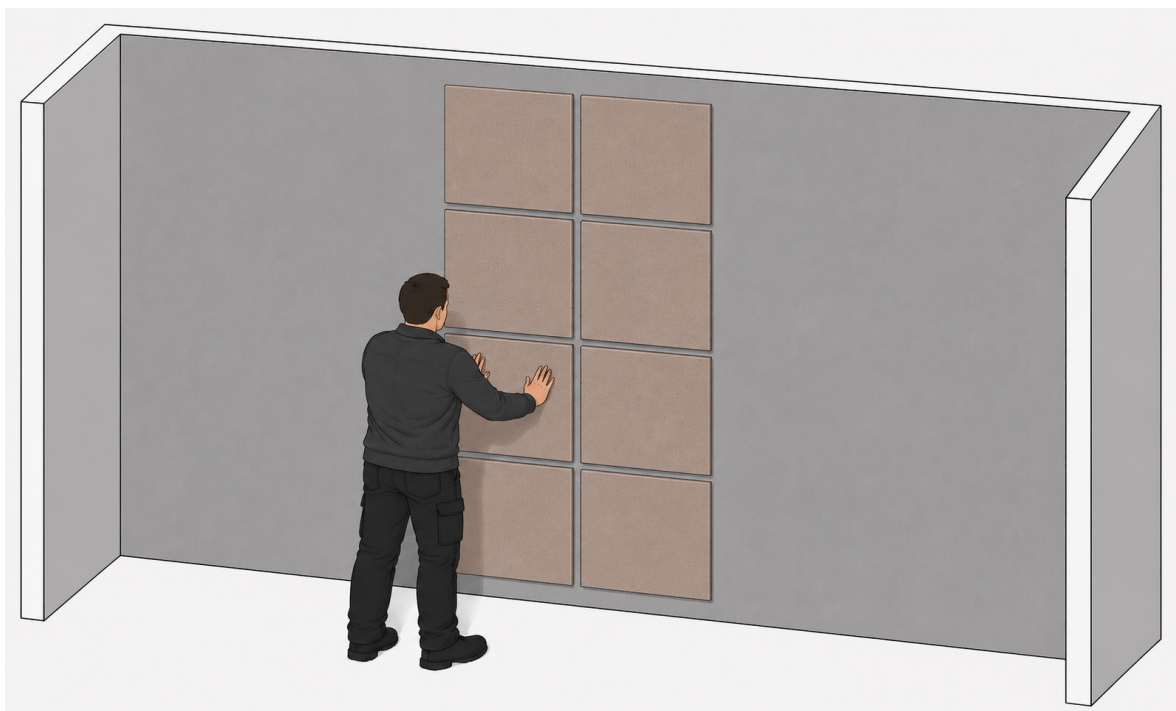

4

Repeat the process with all the wall absorbers. You can choose whether to place the absorbers at even intervals or edge-to-edge.

WALLSYSTEMS AB

Sture Steens Väg 9 | 341 55 Vittaryd

Tel.No: 0140-412 25

Email: info@wallsystems.com

Website: www.wallsystems.se